


GTO Single DAQ  
Rev. 1.2 (kakikake)

2013 Nov. 22

# 1 General

## 1.1 Function

## 1.2 Connector

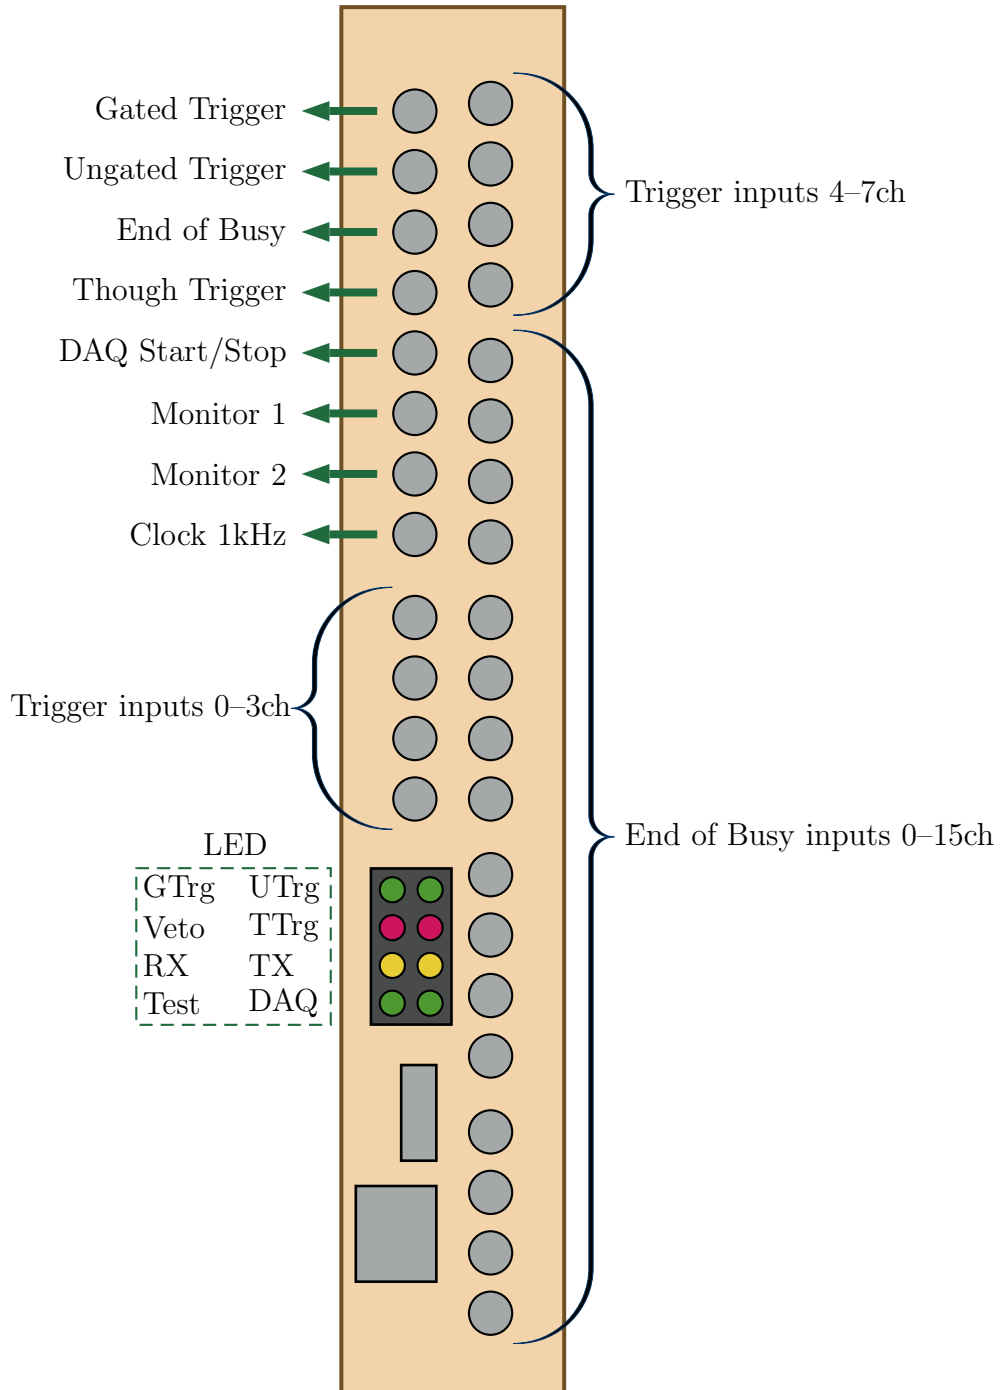

## 2 Interface

### 2.1 Register Map

Command list.(Tab.2.1)B

Table 2.1: Command map, '\*' means any characters.

<b>Setting</b>	On	Off	Default
Trigger	0A-0H	0a-0h	On(A-D), Off(e-h)
End of Busy	0I-0X	0i-0x	On(I-L), Off(m-x)
Test LED	0Y	0y	Off
DAQ Start	0Z	0z	Off
Monitor 1	0A-0Z		0Z
Monitor 1	0A-0Z		0Z
<b>Function</b>			
Purge commad	!!		
<b>Readout</b>			
Data setting	@@		
Busy status	@0		

#### 2.1.1 Trigger

A/a corresponds to 0th trigger input. B/b is 1st trigger input. H/h is 7th trigger input. Capital letters (0A-0H) enable trigger inputs. Small letters (0a-0h) disable trigger inputs.

#### 2.1.2 End of busy

I/i corresponds to 0th end-of-busy input. X/x is 15th trigger input. Capital letters (0I-0x) end-of-busy inputs. Small letters (0i-0x) disable end-of-busy inputs.

### 2.1.3 Monitor

0Z is the or of veto. 0Y is the or of trigger inputs. 0A–0H corresponds trigger 0–7 inputs. 0I–0X are internal veto signals for 0–15th.

## 3 Appendix

### 3.1 Version Information

1.2 First stable version